Owner Manual and Installation Guide for
NRA® Home Defense Cabinet by Jotto Gear
Manual Lock Only Models: 430-0140, 430-0141, 430-0142, 430-0143

Using the diagram and key on this page, please familiarize yourself with this product and the components listed.

Each NRA® Home Defense Cabinet by Jotto Gear comes with: (See Figure A.)

(1) **Top Slide Bracket Assembly w/Latch**
(2) **Cabinet Shelf**
(3) **Wall Insert**
(4) **Frame**
(5) **Manual Handgun Holster**
(Included in Models 430-0141 & 430-0143)
(6) **Mirror**
(7) **Manual Lock Head Assembly**
(8) **Trigger Guard**
(9) **Butt Rest**
(10) **Butt Rest Bracket**
(11) **Bottom Slide Bracket**
(12) **Installation Hardware Bag** (not shown)

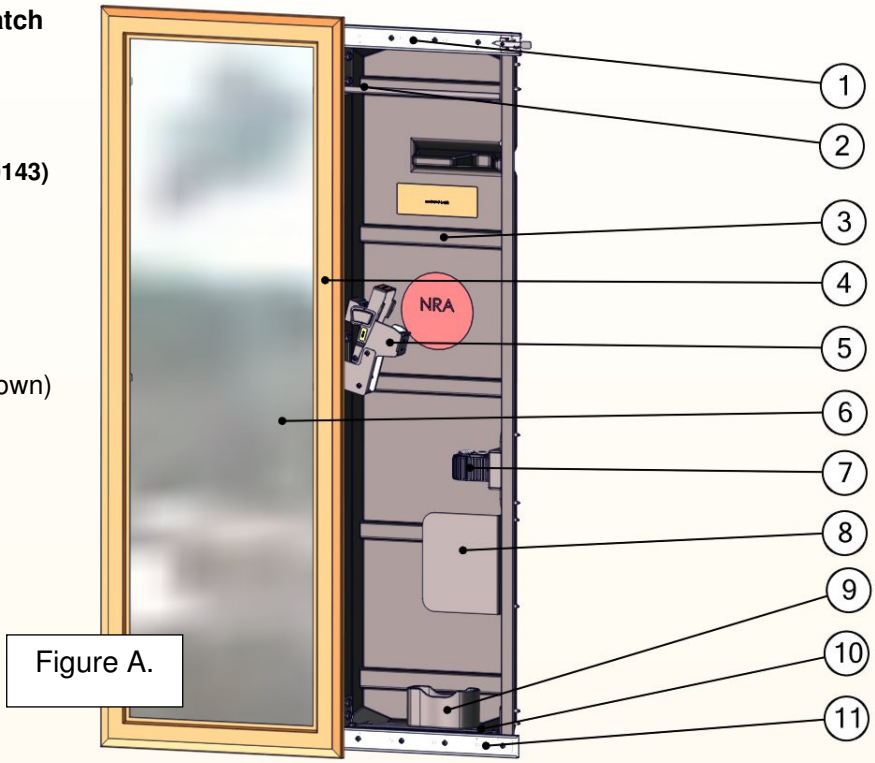

Figure A.

90 Day Limited Warranty

This warranty is extended solely to the original purchaser. A purchase receipt or other proof of date of original purchase and a Jotto Gear RGA# will be required for returned items. All defective parts for replacement must be returned to factory.

This warranty does not cover labor for installation or damages to home during installation. This warranty only covers failures due to defects in materials or workmanship which would occur during normal use. This warranty does not cover any frames modified or finished by consumer, or parts failures which result from alteration, accident, misuse, abuse, damages during theft, improper installation, modification or service by anyone other than Jotto Gear. This warranty does not cover damage that is attributable to acts of God.

Should you find a part missing or damaged please contact Jotto Gear Customer service at 1-800-979-3375 or by chat at www.NRAJOTTOGEAR.com
Keep this Owners Manual as reference.

MADE IN THE USA

Owner Manual and Installation Guide for
NRA® Home Defense Cabinet by Jotto Gear
Manual Lock Only Models: 430-0140, 430-0141, 430-0142, 430-0143

Table of Contents

Jotto Gear Contact Information ..... Page 1
Parts Diagram ..... Page 1
90 Day Warranty ..... Page 1
Table of Contents ..... Page 2
Important Warnings ..... Page 2
Tools Required for Installation ..... Page 3
Opening, Removing, Attaching Frame ..... Page 3-4
D.I.Y. Finishing Frame ..... Page 4
Frame Sliding Options ..... Page 5
Determining Location for Install ..... Page 6-7
Weapon Mount Adjustments ..... Page 7
AR Option Lock Head Adjustment ..... Page 8
Shotgun Option Lock Head Adjustment ..... Page 9
Optional Handgun Adjustment ..... Page 10-11
Pre-Drilling ..... Page 11
Mirror Attachment ..... Page 12
Mounting Defense Cabinet ..... Page 12-14
Firearm Fit Chart ..... Page 15

Models: (*See Fit Chart)
430-0140 – Single Firearm Model / Finished Frame w / Manual Lock – Shotgun or AR*
430-0141 – Dual Firearm Model / Finished Frame w / Manual Lock – Shotgun or AR and one Handgun*
430-0142 – Single Firearm Model / D.I.Y. Unfinished Frame w / Manual Lock – Shotgun or AR*
430-0143 – Dual Firearm Model / D.I.Y. Unfinished Frame w / Manual Lock – Shotgun or AR and one Handgun*

WARNING

FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR DEATH TO YOU OR OTHERS

WARNING:	**READ MANUAL AND INSTALLATION GUIDE BEFORE USING**
WARNING:	**This storage device is not a substitute for a gun safe. Given sufficient time any firearm storage device may be compromised.**
WARNING:	**Neither the NRA® Home Defense Cabinet by Jotto Gear nor any other firearm device can take the place of other safety procedures including advising children of the dangers of firearms and keeping firearms away from the untrained.**
WARNING:	**Empty firearms of all ammunition before storing. Do not store with rounds in firearms. Store magazines and ammunition separately.**
WARNING:	**Always keep fingers clear of trigger when removing or replacing firearms.**
WARNING:	**Keep thumb on back of hammer or slide when inserting pistol in holster to insure pistol is not cocked during insertion.**
WARNING:	**Always store firearms in the NRA® Home Defense Cabinet with safety in closed and locked position.**
WARNING:	**Use only with firearms listed in user's manual. Do not use firearms not listed.**
WARNING:	**Always handle firearms as if they are loaded and ready to fire.**
WARNING:	**Never mix alcohol or drugs with firearms, the NRA® Handgun Holster or NRA® Home Defense Cabinet.**
WARNING:	**Always follow firearm safety rules set out by the firearm's manufacturer.**

Owner Manual and Installation Guide for
NRA® Home Defense Cabinet by Jotto Gear
Manual Lock Only Models: 430-0140, 430-0141, 430-0142, 430-0143

Tools needed for Installation

1) Stud finder
2) Sheet rock saw or utility knife
3) Philips screw driver #1 tip
4) Level
6) Drill
7) Masking Tape
8) 3/16” drill bit
9) Tape measure
10) 3/16” Allen wrench
11) 7/16” socket and driver or drill attachment
12) Un-loaded firearm intended for use with HD cabinet
Reference last page for firearm compatibility

Upon receiving your NRA® Home Defense Cabinet, remove all packaging materials and the items within wall insert and frame assembly.
Leave protective film on finished frame during installation and mirror assembly instruction steps, to prevent scratches.

The cabinet comes factory assembled with wall insert and frame attached. The frame will slide open to left hand side of cabinet. When installed, this will require 22 inches of clear space left of frame.

If frame comes pre-finished and desired location has adequate space for sliding frame you can skip to page 6, Step 1.

Depending on chosen location for cabinet, the direction of sliding frame may not work. Rotation of sliding rails may be necessary to open cabinet frame fully. To change cabinet opening direction, follow “Removing Frame Instructions” and “Optional Right Hand Instruction”. The optional right hand sliding will require 22 inches of clear space right of frame instead.

Locate latch in top right corner of wall insert assembly and press up slightly to open frame.

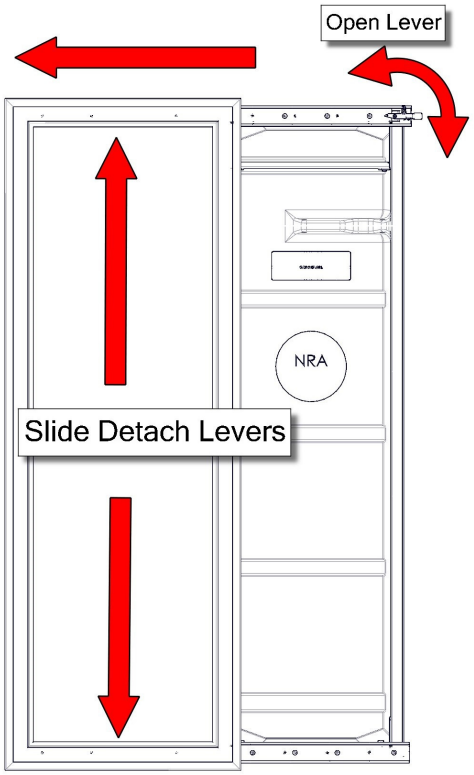

REMOVING FRAME INSTRUCTIONS

After opening frame, place frame face down on soft surface to prevent damage to frame.

Locate black detach levers on back of top and bottom sliding rails mounted to frame. Press and hold detach levers while sliding rails and rest of wall insert off of frame.

D.I.Y. unfinished frames should be finished as desired prior to completing any other steps. Please allow for adequate curing time for any finishes prior to continuing further assembly.

Important Note: Frame is not returnable or covered by any warranty once consumer modifies or applies any finishes such as stains, primers, paints or other coatings.

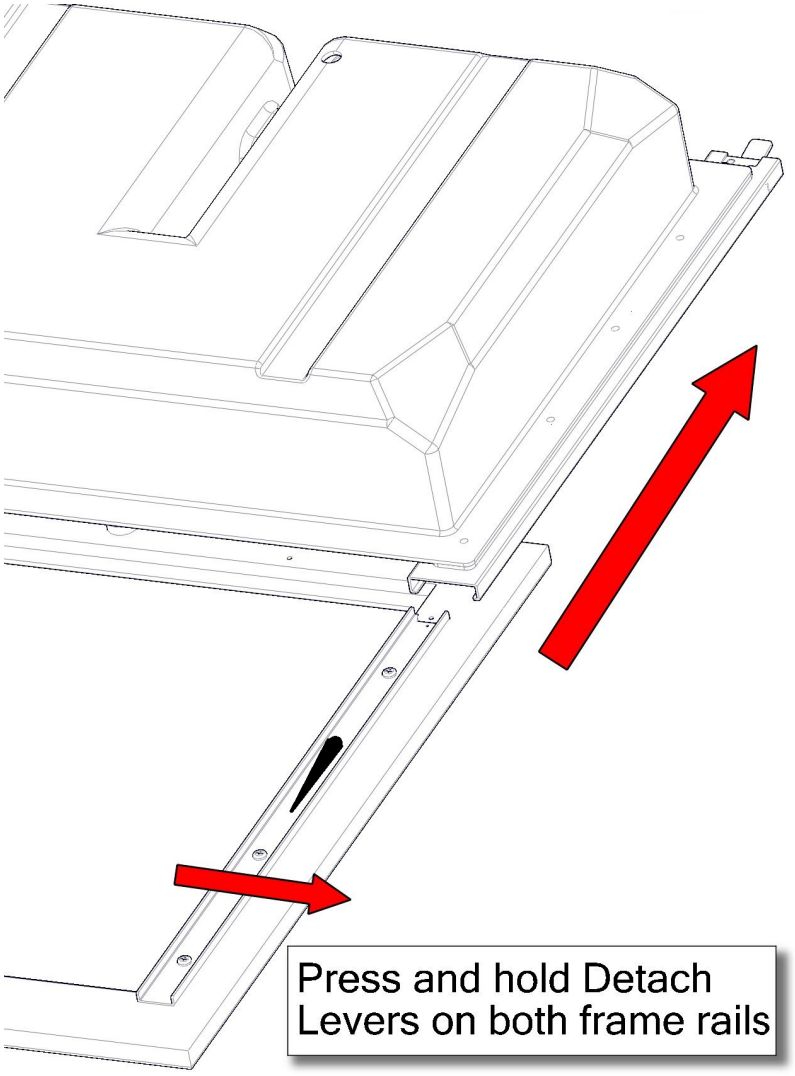

RIGHT HAND SLIDING INSTRUCTIONS

Top and bottom slide brackets should remain riveted to plastic wall insert throughout installation.

After sliding frame off wall insert assembly, unscrew slide rails from brackets of wall insert and from frame.

Rotate all slide rails 180 degrees.

Align screws with new circled hardware positions in picture below.

Secure rails with same screws previously removed.

Assure rails are parallel with frame edge. Properly installed rails make re-attachment of sliding frame easier.

Remove and rotate for Right Hand Slide Option

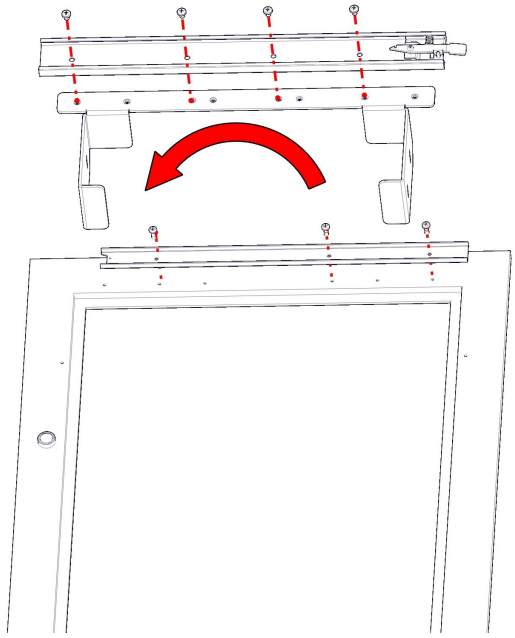

Right Hand Slide Option

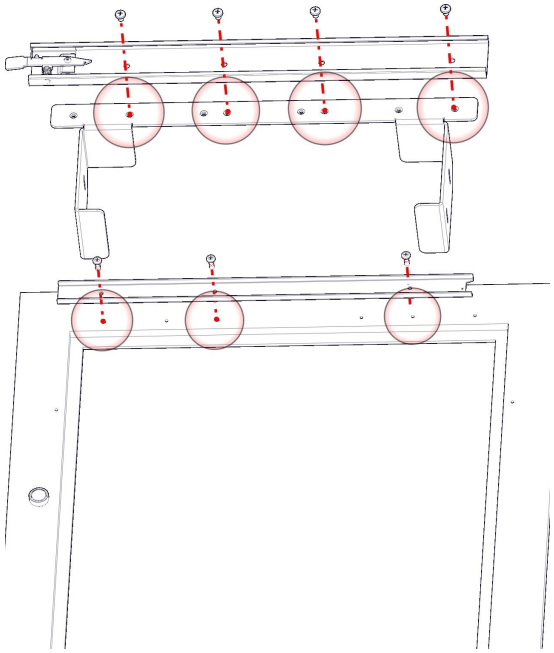

Once rotated and screws re-secured, the finished frame can be assembled by aligning mating slides of wall insert and sliding back together.

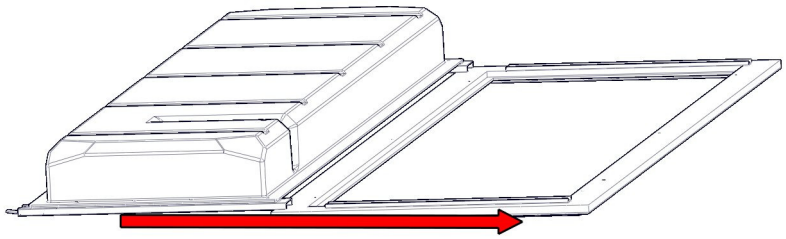

WARNING

Before you begin, make sure the location you choose is free of all electrical, plumbing and mechanical services.

WARNING

In cases where electrical or plumbing needs relocation, consult with a licensed professional contractor for these services.

CAUTION

Also be careful installing behind opening doors. Door knobs may damage frame or break mirror when door is opened fully.

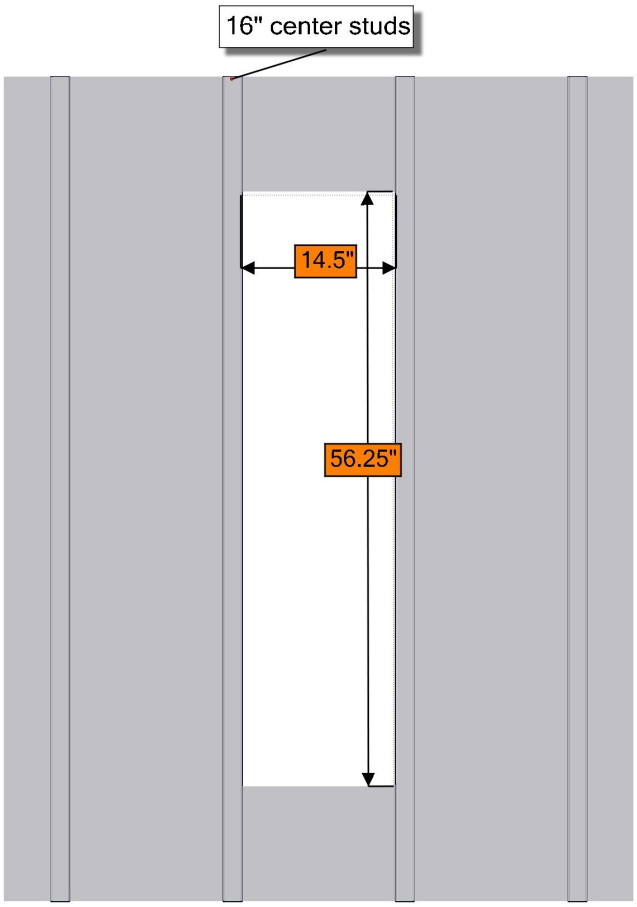

STEP 1: Determining the Installation Location

When installed, the height of the mirror will be determined by the cut out. Consider the height prior to cutting any holes, as it may impact practical use of mirror and cabinet for all purposes. Also, consider 22 inches of clearance is needed next to cut out for the sliding frame to open properly.

Dimensions of cut out are:
14.5” width
56.25” length

The NRA® Home Defense Cabinet is designed to fit into an interior standard stud wall built with 2x4’s on 16” centers. Once you have located where you want to install your NRA® Home Defense Cabinet, you will need to cut out a hole large enough to fit the wall insert. Use a stud finder to locate the studs that will be on the left and right sides of the wall insert.

STEP 1: Determining the Installation Location (Continued)

Once you have determined your left and right stud locations, using a pencil, draw a horizontal line between the studs at the bottom end of where you want your wall insert to begin. Measure up 56.25" and draw another horizontal line between the left and right studs. Before you cut out the drywall, put the wall insert up against the wall and ensure that the hole you have measured will fit the wall insert, and the frame is at the desired usable height.

An interior wall properly framed on 16" centers will leave a standard of 14.5" inside distance between studs. Use a drywall saw or utility knife to cut out the drywall. Make a small cut all the way through the drywall just to the inside of where the left or right stud is. Cut towards the stud to locate the inside edge of the stud. Cut out drywall in between studs, cutting along studs to the top and bottom lines and across lines drawn in previous step. Place cabinet wall insert assembly into wall, resting it on the bottom edge of the drywall opening. The cabinet wall insert is designed to fit between a standard stud built internal wall. If you can slide the insert more than a 1/4" sideways, you will need to shim out one side as needed for a secure fit. Studs located too close together, may need trimmed to fit insert.

Read following warnings before attempting Step 2 through Step 6.

WARNING

Failure to follow this warning may result in serious injury or death.

Empty any firearms of all ammunition before using for installation purposes.

WARNING

Failure to follow this warning may result in serious injury or death.

Proper mounting of components required to properly secure firearms. Lock head and butt rest placement should be placed so that the firearm cannot be removed while firearms are in stored position and cabinet is in locked mode.

Owner Manual and Installation Guide for
NRA® Home Defense Cabinet by Jotto Gear
Manual Lock Only Models: 430-0140, 430-0141, 430-0142, 430-0143

STEP 2: Adjustment for Firearms

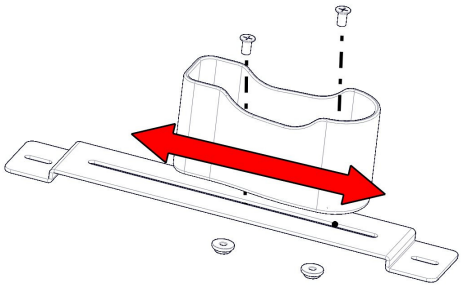

Mocking up placement of firearms will need to be done inside the wall insert. Wall insert can be left vertical in wall cut out or can be removed from cut out and laid on flat surface for this pre-assembly.

Loosely attach butt rest to butt rest bracket with two 1/4-20 flat head screws and two 1/4-20 flange nuts. This will allow sliding adjustment to be made in later step.

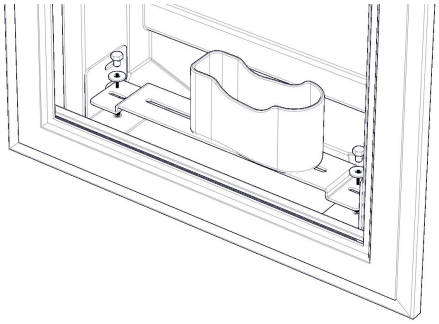

Place butt rest assembly into wall insert and hand tighten two 1/4-20 hex head bolts with washers.

The rounded end of the butt rest should face the right side of the wall insert that the lock head will be mounted to.

Continue with current page for AR rifle setup or page 9 for shotgun setup instructions.

AR Option Instruction

Due to different firearm sizes, lock head positioning will need to be determined before mounting.

Place unloaded firearm intended for use with cabinet into butt rest attached in previous step and wall insert frame assembly.
Unlock lock head with key, open and place barrel of gun inside lock head, then close.

Place strips of masking tape vertically on inside wall insert to mark on for mounting hole placement of lock head.
The face of lock bracket should fit flush inside wall insert not to obstruct sliding of frame.
Mark both holes for mounting lock head and one spot directly behind lock head for cable access.

Adjust butt rest by sliding so that barrel is parallel to wall insert for best fit.

Use Phillips screw driver and 7/16” wrench to tighten butt rest to butt rest plate.

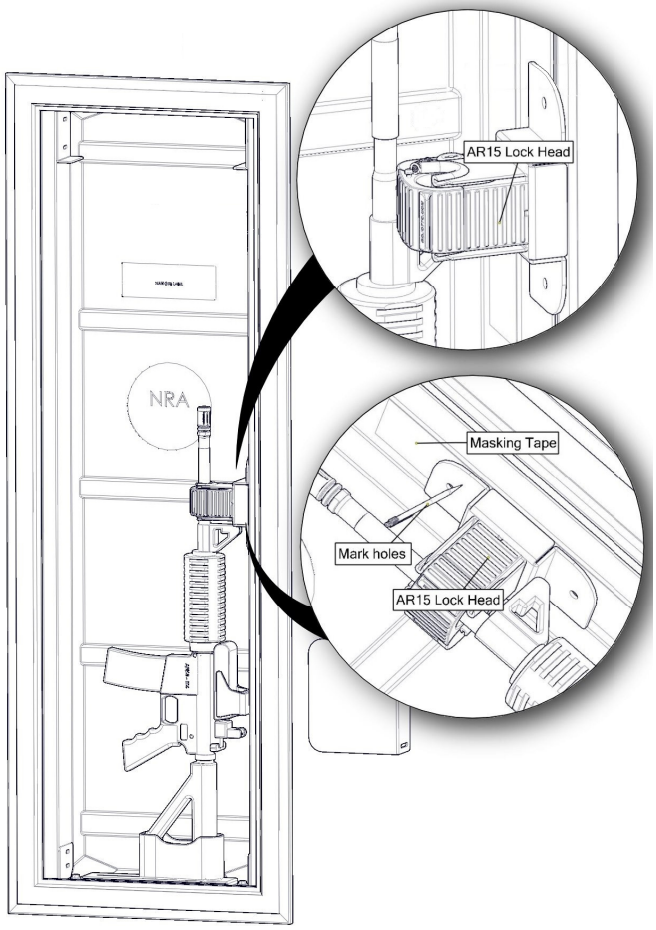

Shotgun Option Instruction

Due to different firearm sizes, lock head positioning will need to be determined prior to mounting.

Open lock head with provided key to access the two Allen head screws.

Remove Allen screws to remove AR bracket. Replace lock head by re-securing screws. 3/16" Allen screw driver required.

Open and place receiver of shotgun inside lock head, then close.

If receiver of shotgun does not fit, use AR Option Instruction on page 8. Depending on barrel type of firearm, the AR barrel bracket may be required.

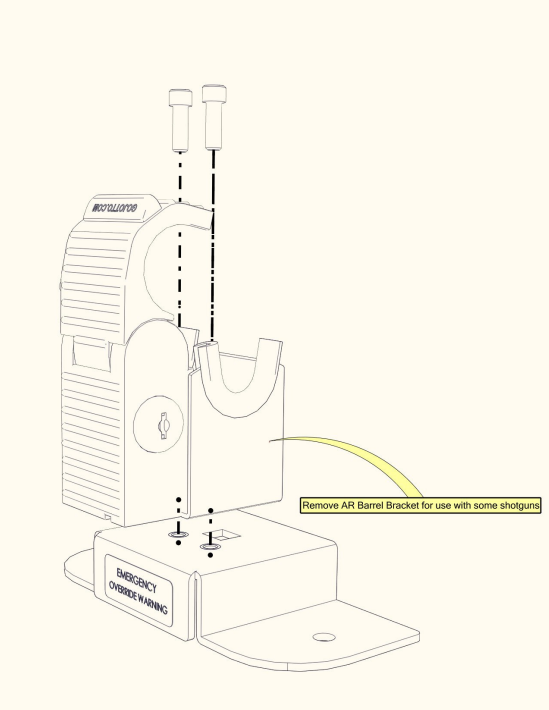

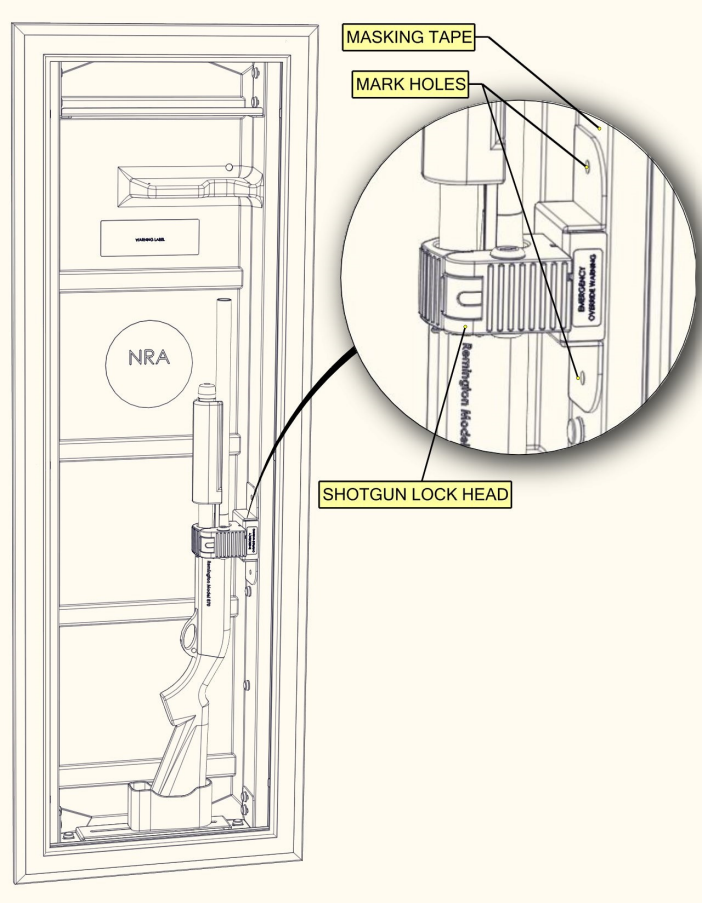

Place strips of masking tape vertically on inside of wall insert to mark on for mounting hole placement of lock head.

The face of lock bracket should fit flush inside wall insert not to obstruct sliding of frame.

Mark both holes for mounting lock head and one spot directly behind lock for cable access to lock head.

Adjust butt rest by sliding so that barrel is parallel to wall insert for best fit.

Use Phillips screw driver and 7/16" wrench to tighten butt rest to butt rest plate.

Handgun Holster Option Setup

(Models: 430-0141 and 430-0143 only)

The handgun holster is supplied with a security torx bit to be used with universal drivers or to be installed in electronic screw drivers.

Lift bale of handgun holster to insert unloaded firearm.

Insert firearm into holster and close bale behind firearm, adjustment to barrel stop may be needed.

Adjust the single security screw on the top front of holster.

Final adjustment should not bind action of bale on handgun holster when secured. If firearm is too tight it may prevent the bale from locking correctly.

Once firearm is lock in place and key removed always check bale firearm is secure.

Larger handguns may require removal of barrel stop and/or shim under the trigger guard to fit properly.

Once comfortable with fit, remove handgun until later steps when mounting bracket is installed.

The security torx bit to adjust barrel stop will be used for securing bracket in later steps and keep in safe place for future adjustment if firearm change is needed.

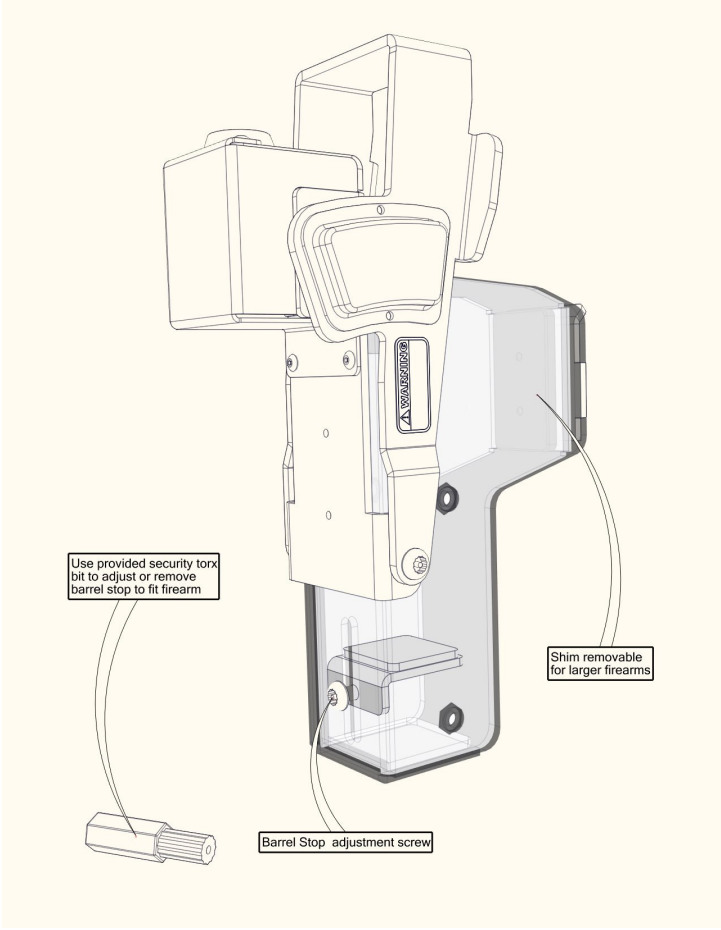
Use provided security torx bit to adjust or remove barrel stop to fit firearm
Shim removable for larger firearms
Barrel Stop adjustment screw

Handgun Holster Option

(Models: 430-0141 and 430-0143 only)

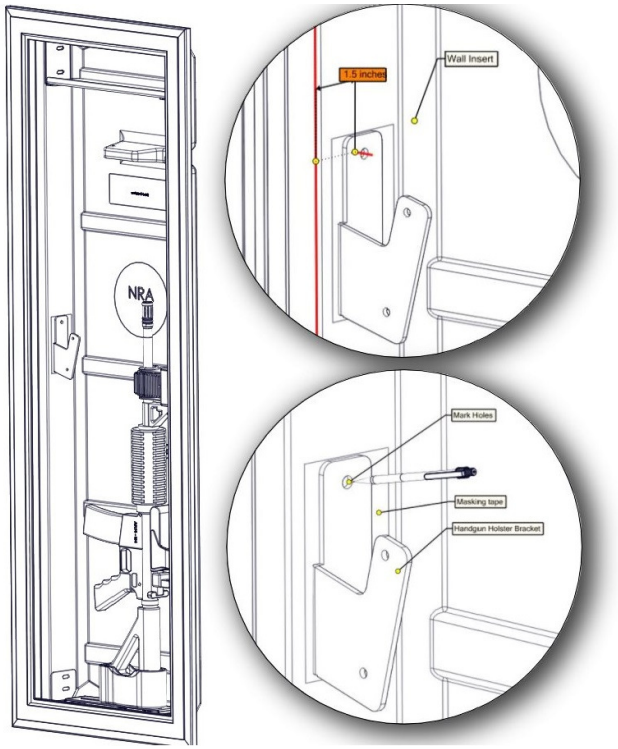

Careful not to mount handgun holster too low, leave enough room for the rifle to be removed without interference with the handgun holster and handgun grip.

Place vertical strips of masking tape into wall insert to mark two holes for handgun bracket mounting hardware.

Bracket should be placed into wall insert to allow room for handgun holster, align holes of bracket 1.5 inches from front edge of black wall insert.

STEP 3: Mirror Installation

Prior to mounting the wall insert into the cut out, place frame assembly face down on soft surface to install mirror. Slide frame wall insert assembly to open position exposing back of frame. Carefully place mirror into frame.

Attach mirror by securing with six #8 x .5" screws and provided mirror retaining tabs found in installation hardware bag. Finished mirror assembly should have three mirror retaining tabs on each of the two vertical sides.

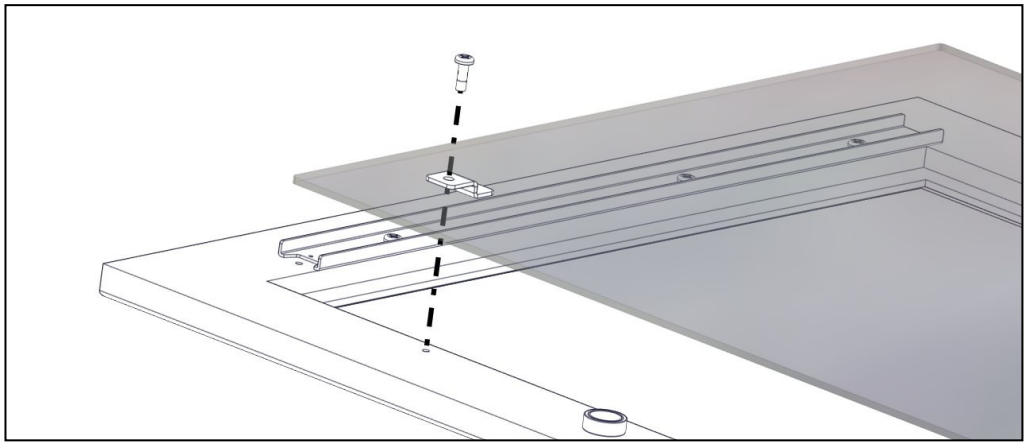

STEP 4: Mounting Wall Insert Assembly

Place frame with mirror and wall insert assembly back into wall cut out.

Slide mirror and frame fully open.

Wall insert and slide brackets should fit flush and level with wall before securing any hardware.

Set hand level on top rail when securing mounting hardware. This will ensure frame remains level while in closed position.

Use two provided lag bolts and washers in the slotted hole of each corner bracket. Align with pre-drilled pilot holes.

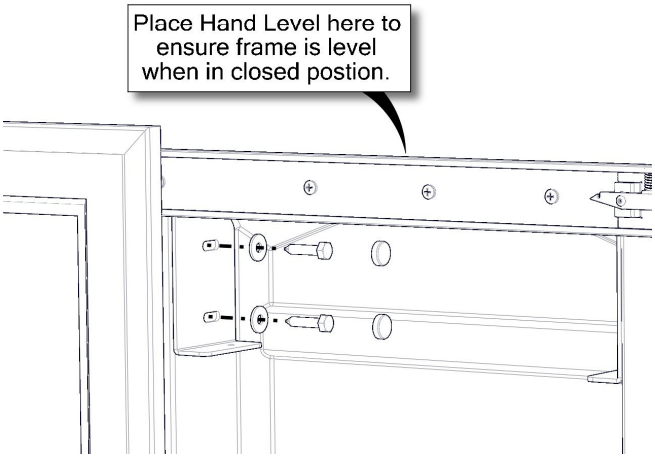

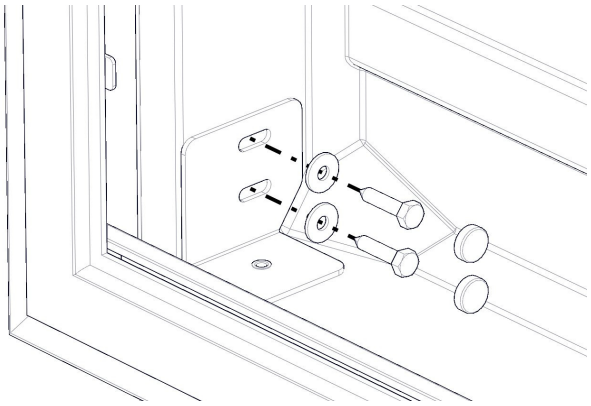

Remove butt rest assembly to access slots for bottom lag bolts.

Once all corners are secure, slide frame open and closed to check fit. Adjustments can be made by loosening lags bolts, adjusting and retighten.

Press all eight black bolt head caps on after securing bolts.

Place butt rest bracket assembly back onto the bottom slide bracket.

Re-secure hardware on butt rest plate with 7/16” wrench to bottom slide bracket.

Have 7/16” socket driver close by and ready to secure bracket to wall insert and 2x4 stud inside wall.

Secure two lag bolts and washers through the pre-drilled holes in wall insert with 7/16” wrench.

The face of the lock head bracket should be flush with wall insert.

Slide frame across to verify lock head does not interfere.

Press two black caps onto heads of secured lag bolts.

Open lock and check fit of firearm.

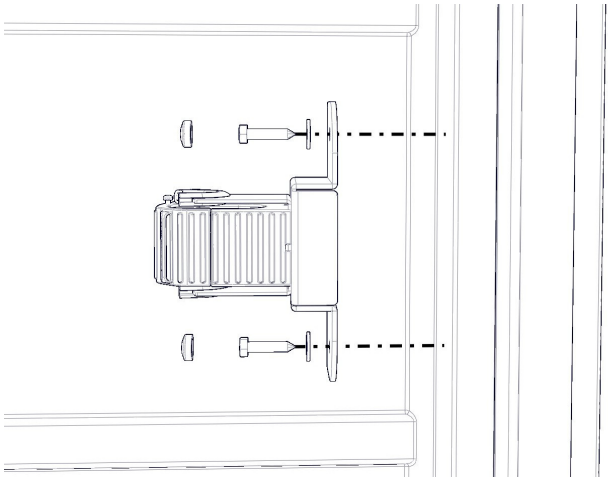

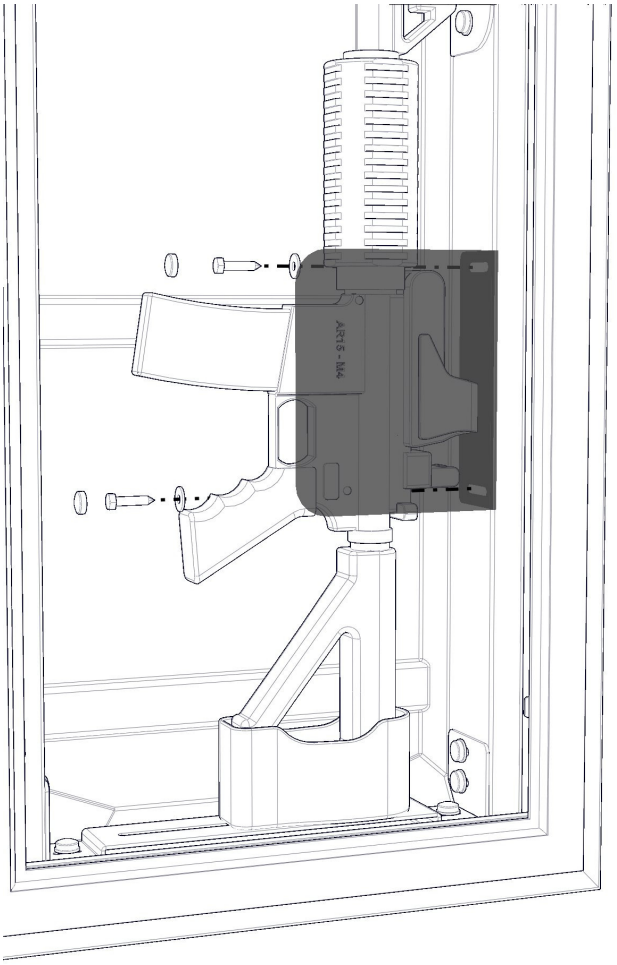

WARNING

RISK OF SERIOUS INJURY OR DEATH
Trigger guard should be mounted in a position that deters inadvertent trigger activation.

Installing Trigger Guard

Determine trigger guard placement by positioning over trigger and receiver action of firearm.

Place vertical strips of masking tape between trigger guard slots and wall insert on to wall insert.

Remove firearm and mark center of slots for mounting hardware.

Drill 3/16” pilot holes in center of marked slots and secure trigger guard to wall insert with two 7/16” lag bolts and washers.

Careful not to interfere with sliding frame, trigger guard should be mounted flush with wall insert while securing. The firearm also should be placed back into the cabinet to re-check fit.

Final adjustments should be made before pressing two black bolt head caps to finish.

STEP 5: Mounting Handgun Holster

(Step only necessary with select models)

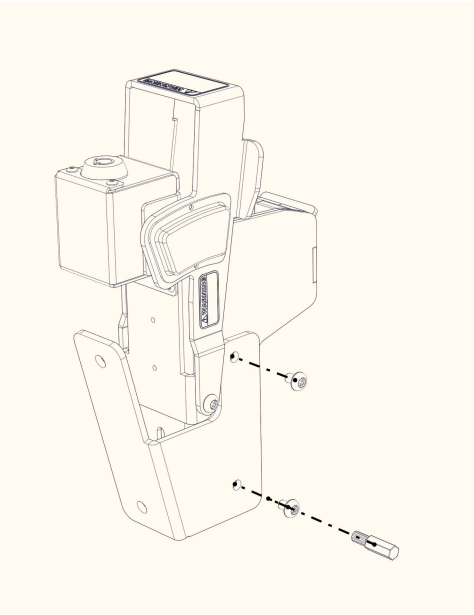

Secure handgun holster mounting bracket with two 7/16” lag bolts and washers.

Press two black caps on heads of mounting holes.

Use the provided security torx bit in a universal driver.

Secure base of handgun holster to bracket with two provided 10-32 security screws.

Save security torx bit and instructions for future use.

Slide frame open and closed to check clearance of all mounts and firearms.

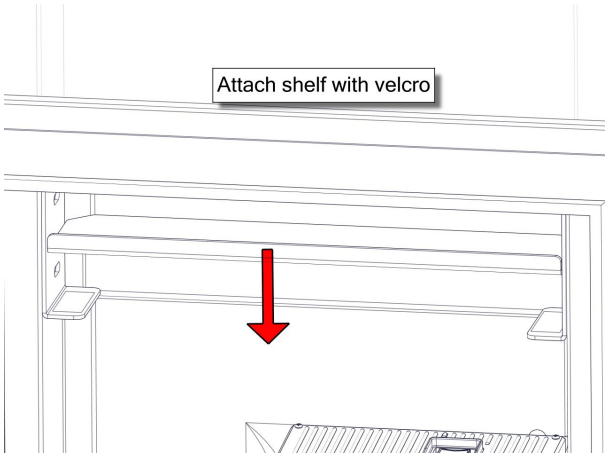

Attach Shelf

Remove backing from hook and loop strips on upper bracket and set plastic shelf in place.

Owner Manual and Installation Guide for
NRA® Home Defense Cabinet by Jotto Gear
Manual Lock Only Models: 430-0140, 430-0141, 430-0142, 430-0143
Firearm Fit Chart

ALL NRA HOME DEFENSE CABINETS MODELS	MODELS 430-0141 & 430-0143 ONLY
SHOTGUN MODELS CZ-USA - CZ612 Mossberg - 590SP, 500 Remington - 870, 870 Tactical, 870 Express Winchester - SXP Defender, SXP Extreme Defender **AR-AK STYLE RIFLE MODELS** ArmaLite Barrett Firearms Manufacturing Bushmaster Firearms International Colt's Manufacturing Company DPMS Panther Arms High Standard Manufacturing Company Knight's Armament Company Land Warfare Resources Corp Intl (LWRCI) Magpul Industries Olympic Arms Para-Ordnance (Para-USA) Remington Arms Rock River Arms Ruger Sabre Defence/Manroy USA Sig Sauer Smith & Wesson Stag Arms	**HANDGUN MODELS** Beretta - 84, 92, 96, M9, PX4 Storm, Nano Bersa - Thunder 380 Colt - Defender, 1911, 1991, XSE, Rail Gun, New Agent, Series 70, Combat, Delta CZ - CZ 75 EAA - Witness FNH - FNX, FNS, Five-Seven Glock - 17, 19, 21, 22, 23, 26, 27, 30, 33, 34, 35, 36, 37 HK - P30, USP, USP Compact, HK45, HK45 Compact Kel Tech - PF9 Kimber - 1911, 1911 Compact Khar - K9 Lionheart - L9C Remington - 1911 R1 Ruger - SR9, SR9C, SR1911 Sig Sauer - P220, P226, P228, P229, P245, P250, Mosquito, SP2022 Smith & Wesson - 5906, 6946, M&P 9, M&P 40, M&P 45, M&P Shield Springfield - XD, XDm, XDs, 1911 Range Officer, Trophy Match, TRP, Operator, EMP, Ultra Steyr - M9 A1 Taurus -709 Slim, PT809, PT840, PT845, PT24/7, 1911, PT92, PT100, PT101, Millennium Tanfoglio - TZ75 Walther - PK380, PPS, P99, PPX, PPQ Wilson Combat - 1911